

Unlock Tutorial

How to unlock your ZLT X28 with X28 PRO

What you need

A Windows PC, your ZLT X28 router, and a connection from the PC to the router (Wi-Fi or USB).
Default gateway **192.168.70.1**.

Steps

1 Download & extract

Download **x28unlock-pro.zip** from routersunlock.com/x28 and extract it.

2 Run the tool

Run **X28-PRO-64bit.exe** (use the 32-bit exe on old Windows).

3 Copy your HWID

The tool shows a **HWID** field - click **Copy**.

4 Generate keys

Open routersunlock.com/x28, paste the HWID, click **Generate 5 Keys**.

5 Unlock

Back in the tool set **Target** (default 192.168.70.1) and press **UNLOCK**; watch the log until complete.

6 Repeat

Each unlock uses one key. When all 5 are used, generate 5 more on the site.

Good to know

Keys are tied to your device HWID (they only work on that machine). If a debugger or packet-capture tool is running, X28 PRO refuses to start - close it and retry. Make sure you can reach the router before pressing UNLOCK.

(c) routersunlock.com - X28 PRO. For use on hardware you own.